


Connect AMS Hub and multi-AMS

This guide explains how to use the AMS Hub to connect multiple AMS units.

Filament Buffer and AMS Hub

The built-in Filament Buffer of the printer can only be connected to 1 AMS. When replaced with AMS Hub, the printer will be able to connect up to 4 AMS.

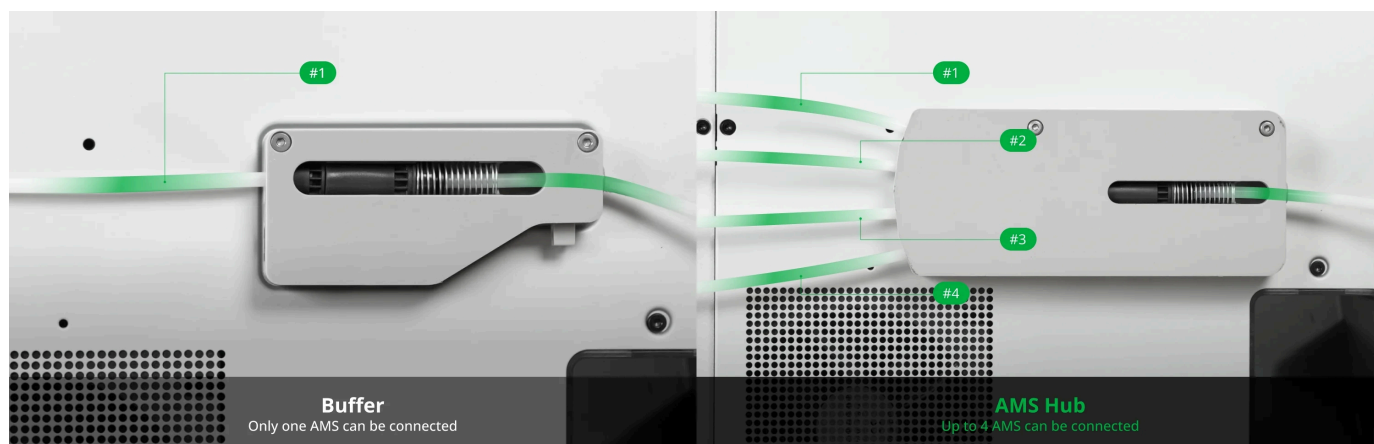

You can purchase them at our store here:

[Filament Buffer](#) [↗](#)

[Bambu Lab AMS Hub](#) [↗](#)

Connect AMS Hub and multi-AMS

Please review the [AMS introduction](#) and read the [Notes for AMS](#) in advance for important information.


Video tutorial

Connecting the AMS Hub to the printer

Please remove the buffer from the back of the printer (if applicable) and install the AMS Hub, as shown in the image below. Once the AMS Hub has been installed, proceed to connect the PTFE tube from the Hub to the PTFE coupler.



In addition, if you are using the **Bambu 4-in-1 PTFE Adapter**, you can connect four filaments from different modules to the printer simultaneously. The installation method is shown in the diagram below. For more related information, please refer to this Wiki: [Bambu 4-in-1 PTFE Adapter](#)

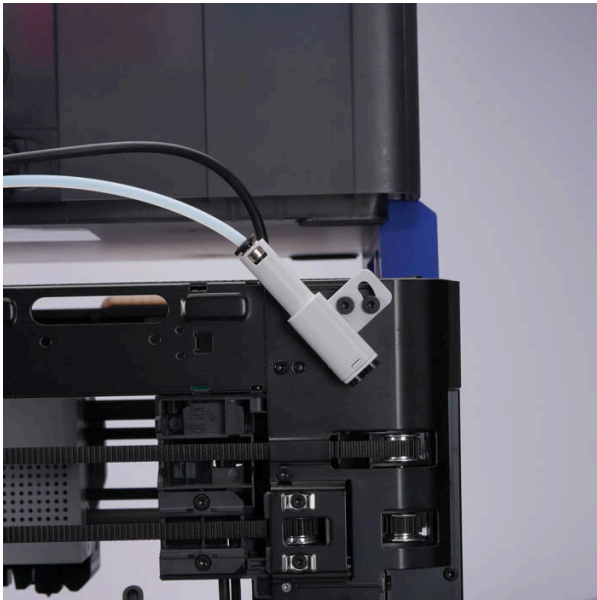

P1P



P1S & X1

Please **ensure** that the PTFE tube runs **under** the spool holder and not over, as shown in the image below.



The spring within the AMS Hub should not be stuck/compressed. Please ensure that it moves freely within the AMS Hub.



Connect the AMS Hub to the printer with the Bambu Bus Cable 4 pin.

You can purchase Bus Cables at our store here: [Bambu Bus Cable](#) 

Note: When connecting the 4 pin cable, make sure it is in the correct orientation. If you are using an L-shaped plug cable, pay attention to its text prompts. If you insert the 4 pin cable in the wrong direction, it may cause the printer and AMS mainboard to burn down.



Bambu Bus Cable 4 pin (Correct orientation)




L-shaped plug cable

Connect AMS to the AMS hub

Connect the cables

Connect the most frequently used AMS to the AMS Hub and power on the printer. Then, connect the remaining AMS to the other Bus Cable 6 pin port of the previous AMS.

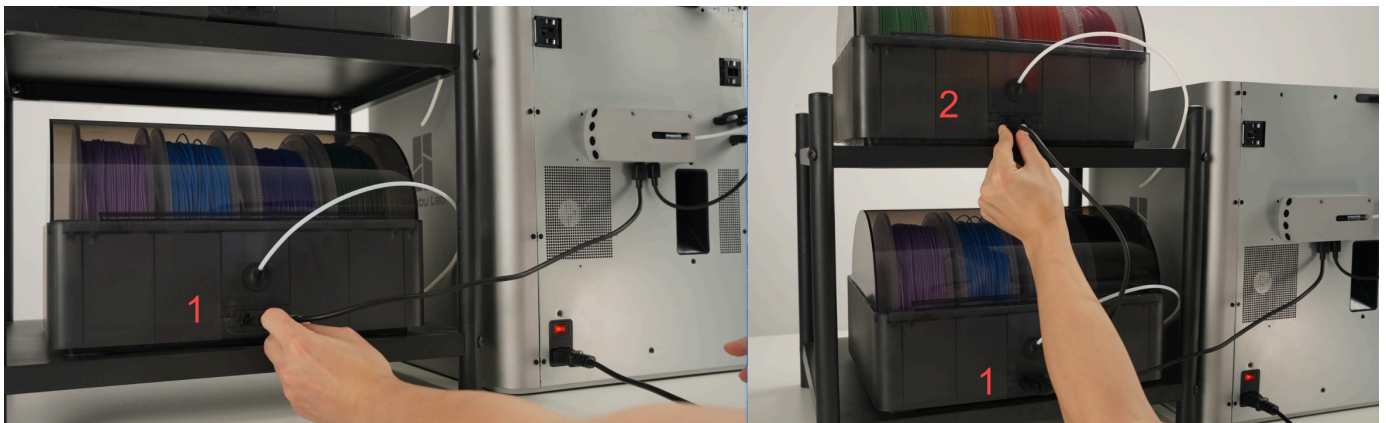


Kind reminder:

Our store offers two types of 6-pin bus cables: 510 mm and 1500 mm in length. The 510 mm cable is commonly used for connecting the buffer and AMS, while the 1500 mm cable is widely used for connecting the AMS Hub and AMS.

If you need a longer Bus Cable 6 pin, please purchase it at our store [Bambu Bus Cable](#) .

Connect the PTFE tube of AMS to AMS Hub

Having the correct PTFE Tube length is important. We recommend keeping it as short as possible while avoiding excessive bending. This helps minimize AMS feed resistance and reduces the time required for filament loading and unloading.

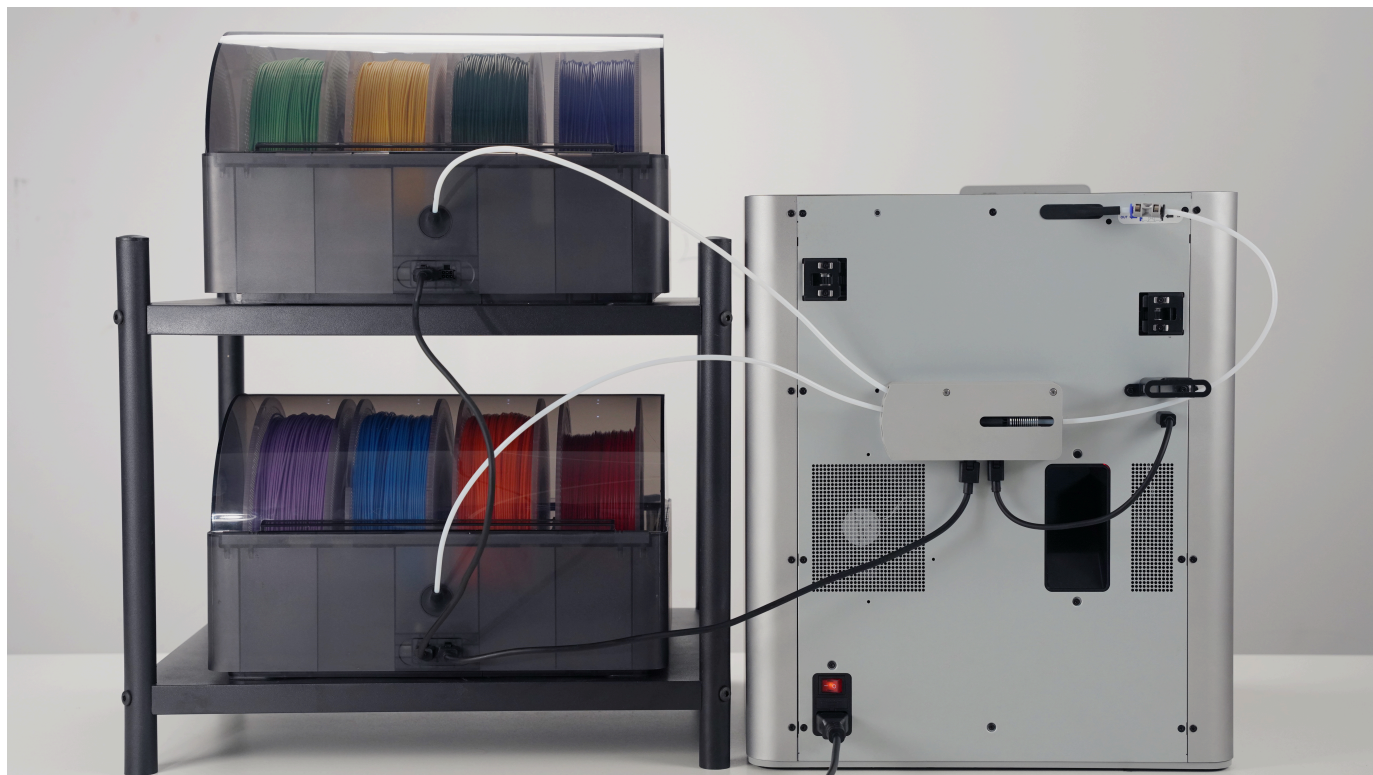

Note: When connecting multiple AMS to the AMS Hub, it is advised to keep the longest PTFE tube length within 3.5 meters. Excessive length in the feeding path can result in increased resistance, potentially affecting the smooth loading and unloading of filament. Additionally, avoid excessive bending of the PTFE tube to minimize resistance.

Check if the connection is successful

Please check your printer to ensure the correct installation of the AMS Hub and additional AMS units. Refer to the provided image for a successful setup.



You can refer to this wiki to start multi-color printing: [Multi-color printing operation guide](#)

After the connection is successfully established, you need to **upgrade both the AMS Hub and the AMS to the latest version**, either via offline upgrade or online upgrade. If the firmware versions of the printer, AMS Hub, and AMS do not match, printing may fail.


Tips

1. AMS ID assignment

Each AMS is assigned an ID, which is displayed on the screen. The logic for assigning AMS ID is to easily identify the connection between them, e.g., AMS1 is directly connected to the AMS Hub, AMS2 is connected to AMS1, and so on.

Please note that you should connect them individually to be able to assign the ID in order. Keep the printer powered on during this process.

However, if you connect multiple AMS units in advance and then connect to the AMS Hub at the end, or you connect all AMS to the hub before powering on the printer, it will randomly assign IDs to these AMS.

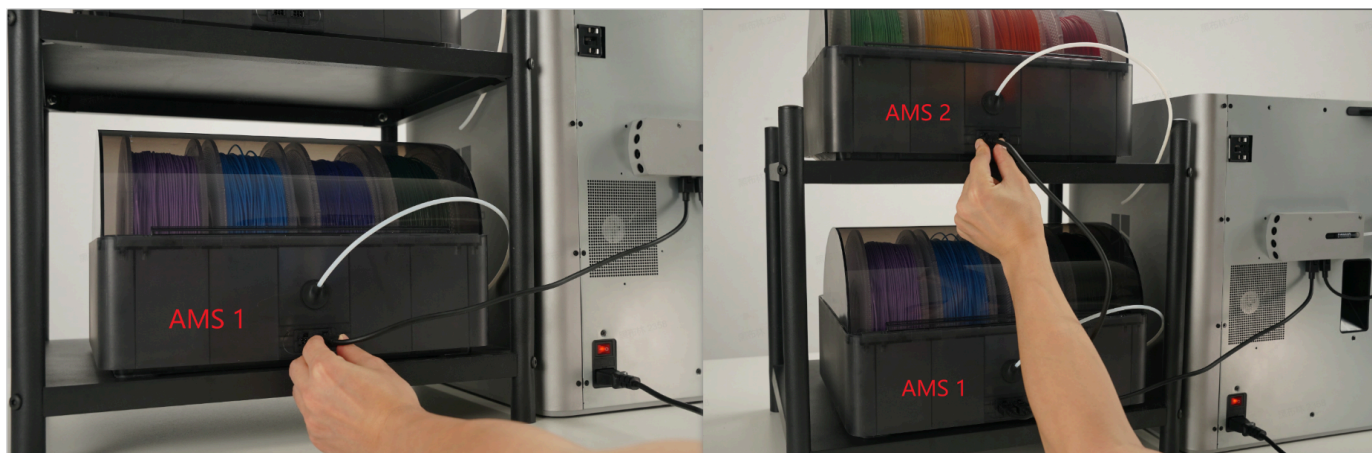


AMS 1 connects to the AMS Hub, and then AMS 2 connects to AMS 1



The AMS has a “mapping” function (refer to [Multi-color printing operation guide](#)), so the ID of AMS will not affect the new printing, but the built-in model will be affected. Please refer to Tip 2.

1.1 How to reassign the AMS ID

The AMS ID will be saved and not cleared even if the machine is turned off. You can reset the AMS ID as shown below, **please disconnect the AMS cable after clicking this button.**

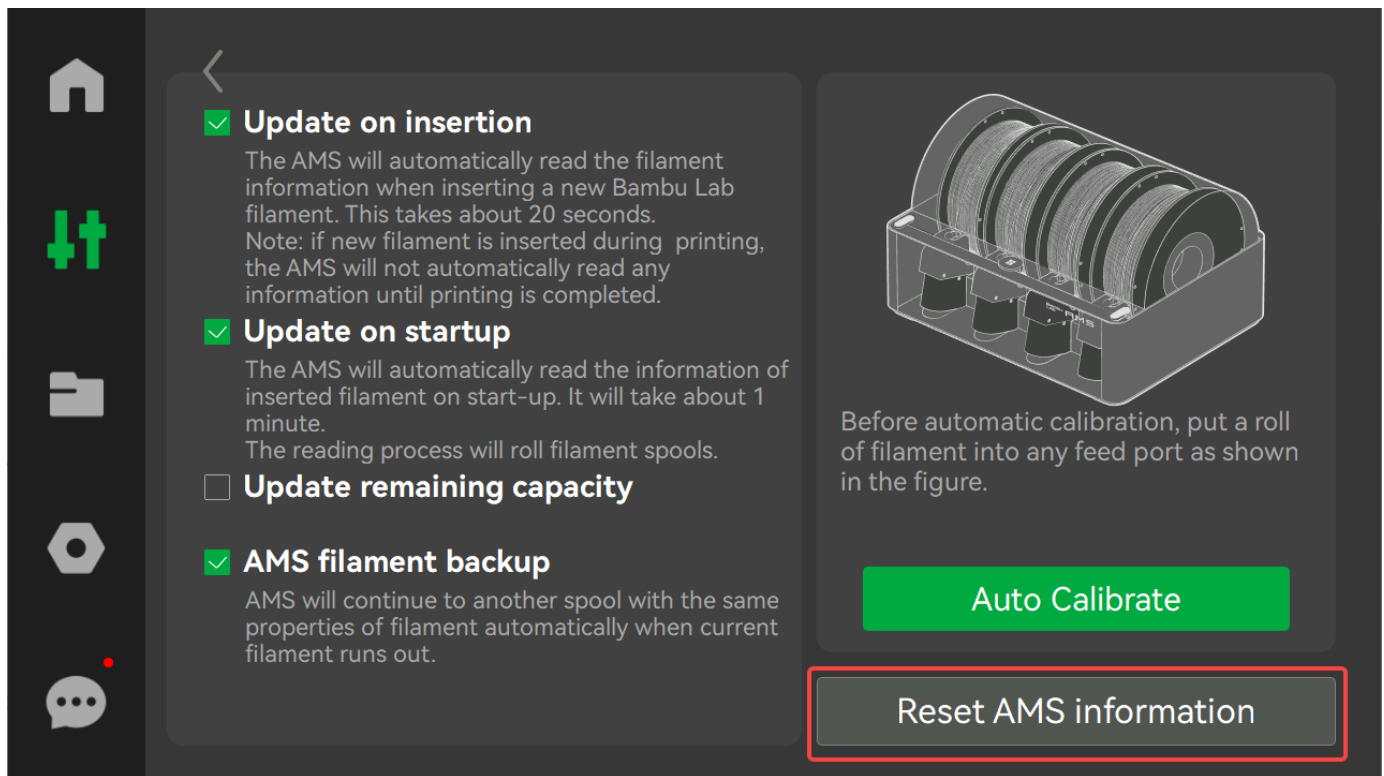

Note: After clicking to reset the AMS ID, the AMS will temporarily lose communication (all four slots will flash red lights), which is a normal phenomenon. You can unplug the 6-pin cable at the back of the AMS and reconnect it in the desired order one by one.

2. Printing the built-in model

Currently, printing the built-in models **only supports printing starting from slot 1 of AMS1**, with no support for mapping to other slots. You will need to place the filaments into the AMS slots from left to right according to the prompt on the print launch page:



If you want to clean the AMS Hub, please refer to [How to clean the AMS hub | Bambu Lab Wiki](https://wiki.bambulab.com/en/x1/manual/Connect-AMS-Hub-and-multi-AMS)

© 2026 Bambu Lab. All rights reserved. | Powered by [Wiki.js](#) [Cookie Settings](#)