

Bambu Lab AMS Quick Start Guide

Quick start guide for Bambu Lab Automatic Material System


Quick Start for Automatic Material System (AMS)

Bambu Lab **AMS**

Quick Start


Please review the entire guide before operating the AMS

* Safety Notice: Do not connect to power until the assembly is complete.

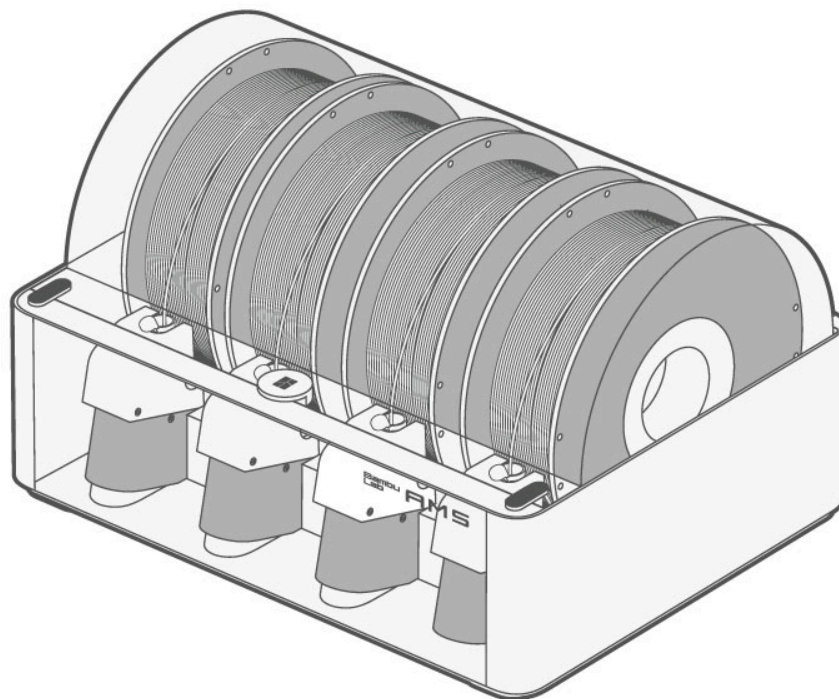


***Warning:**


When operating the AMS, we recommend using Bambu Filament, which has been thoroughly tested to work with the AMS. **Please make sure to avoid using soft materials like TPU or damp PVA, as they can get stuck in the AMS, and please avoid using cardboard spools as the spool may slip.** If you run into any issues with specific filaments, please let us know so that we can provide better advice to our community.

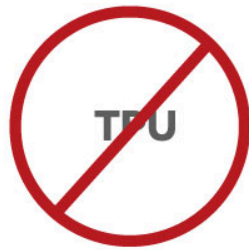

Component Introduction


Component Introduction

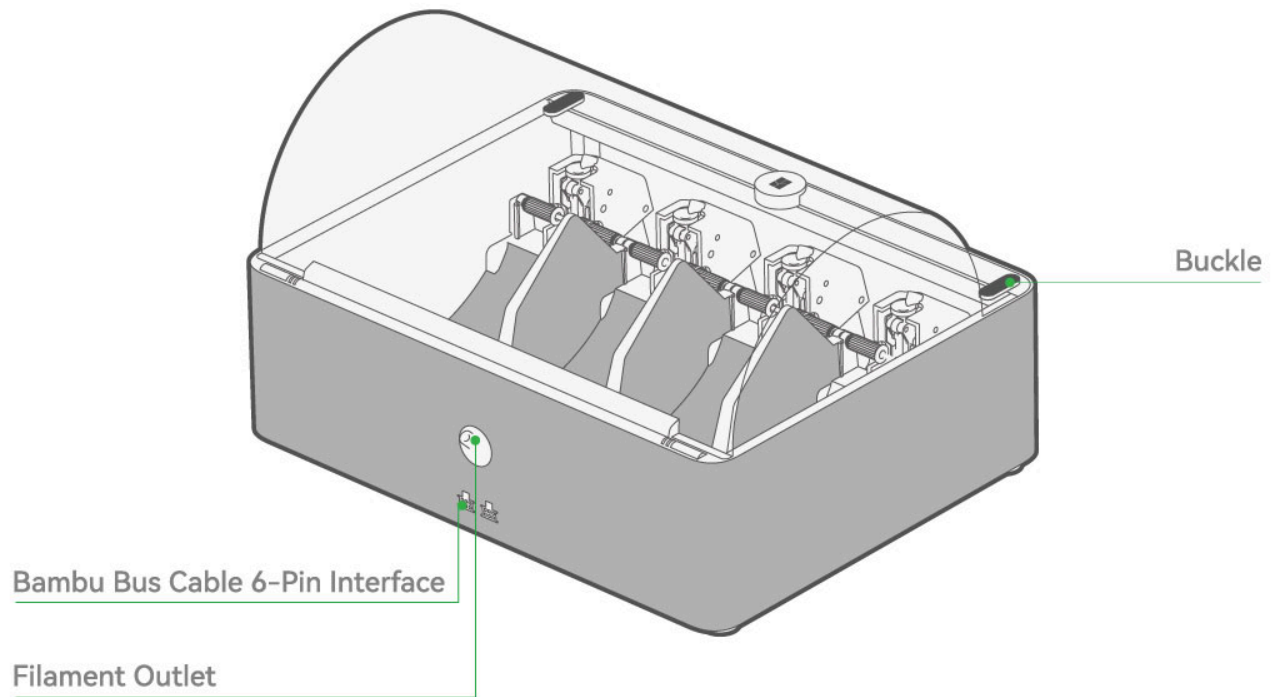

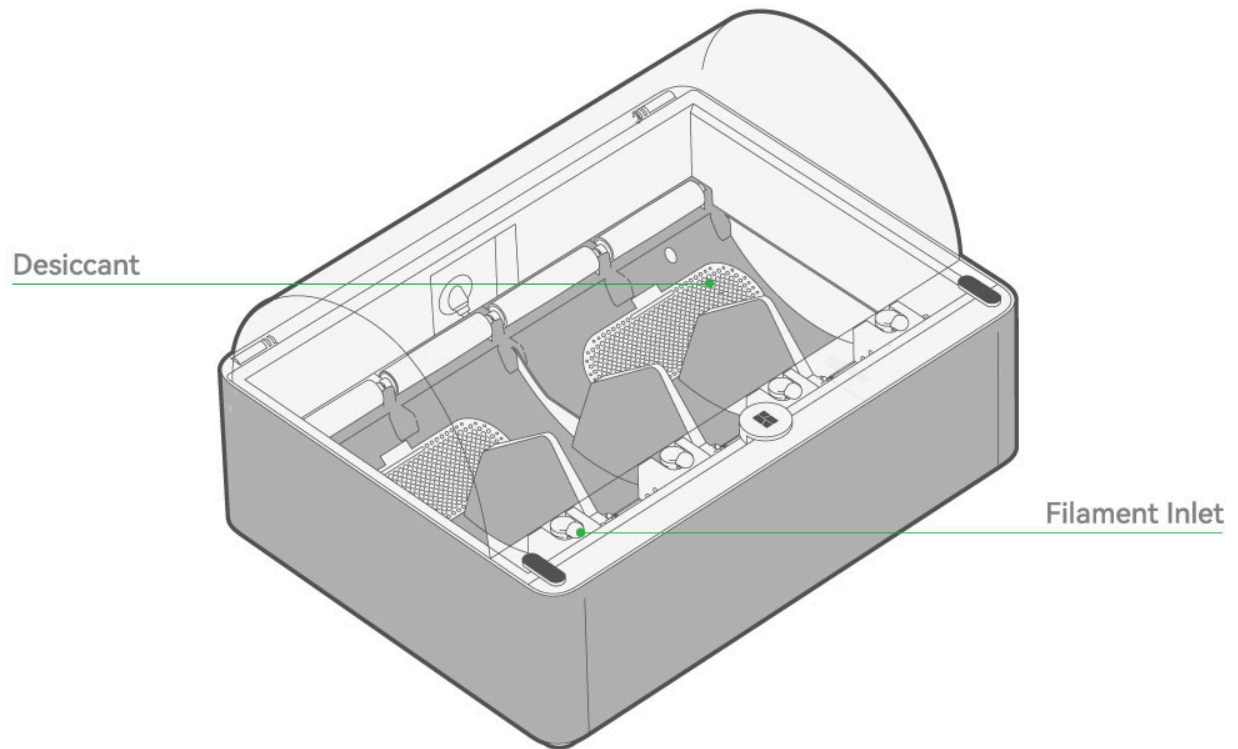

Accessory Specification


Accessory Specification

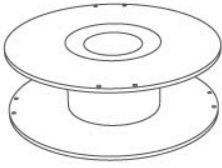


Bambu Reusable Spool (x4)




Filament Buffer

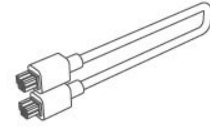


Bambu Bus Cable-4Pin

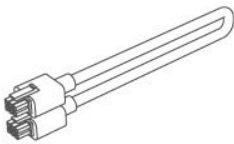

Bambu Bus Cable-6Pin



Spare Filament Cutter(x2)

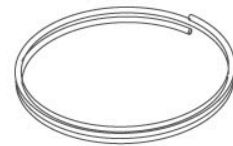


PTFE Tube




PTFE Tube Connector

AMS Assembly


AMS Assembly

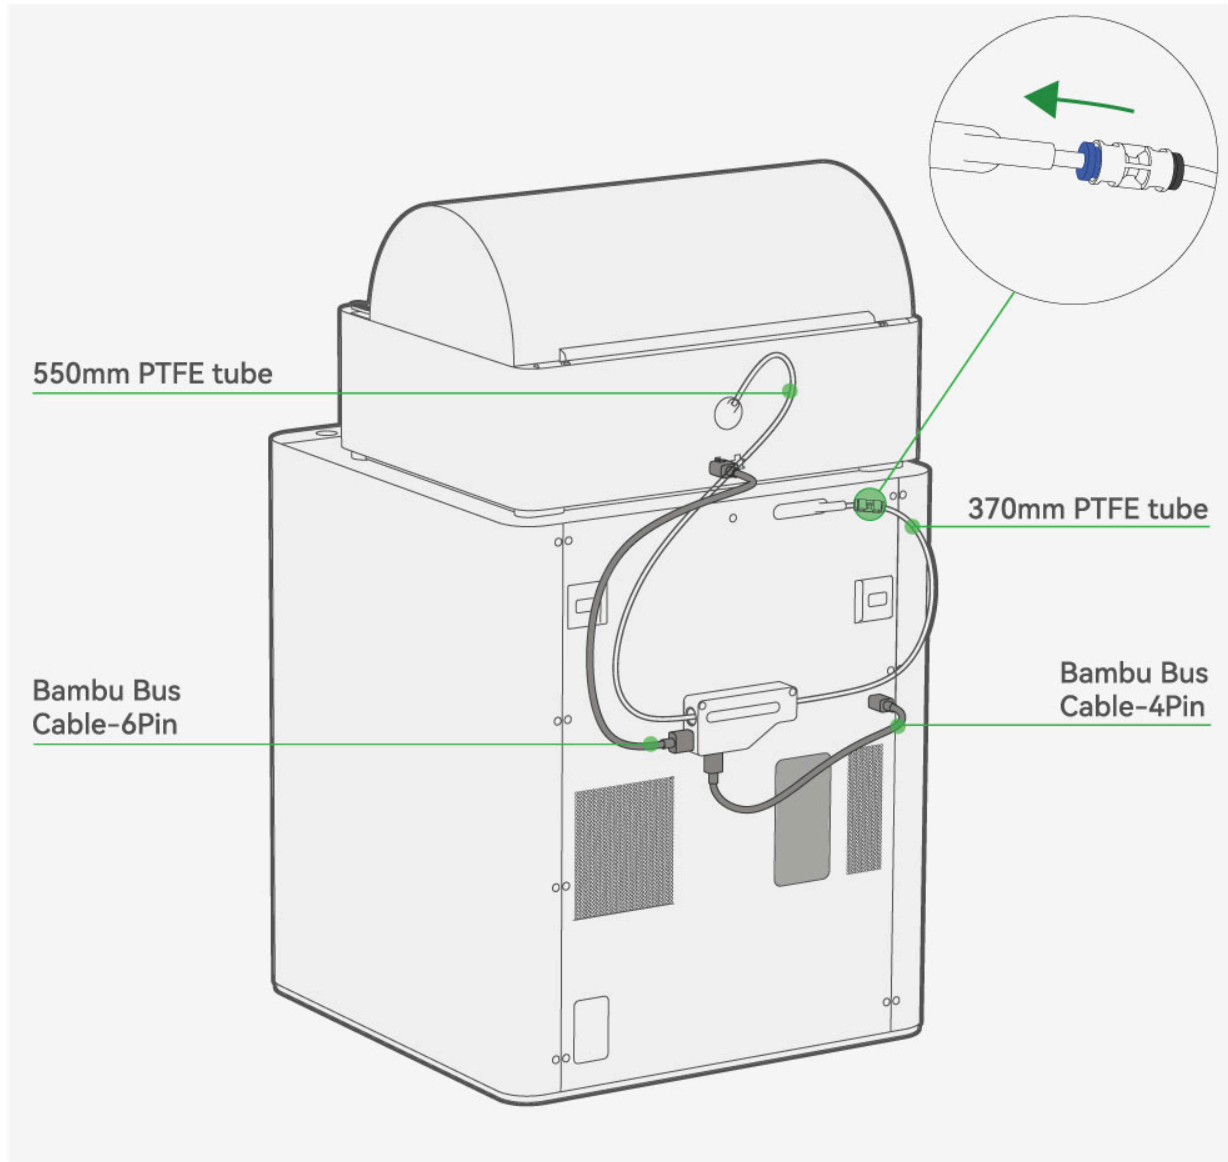

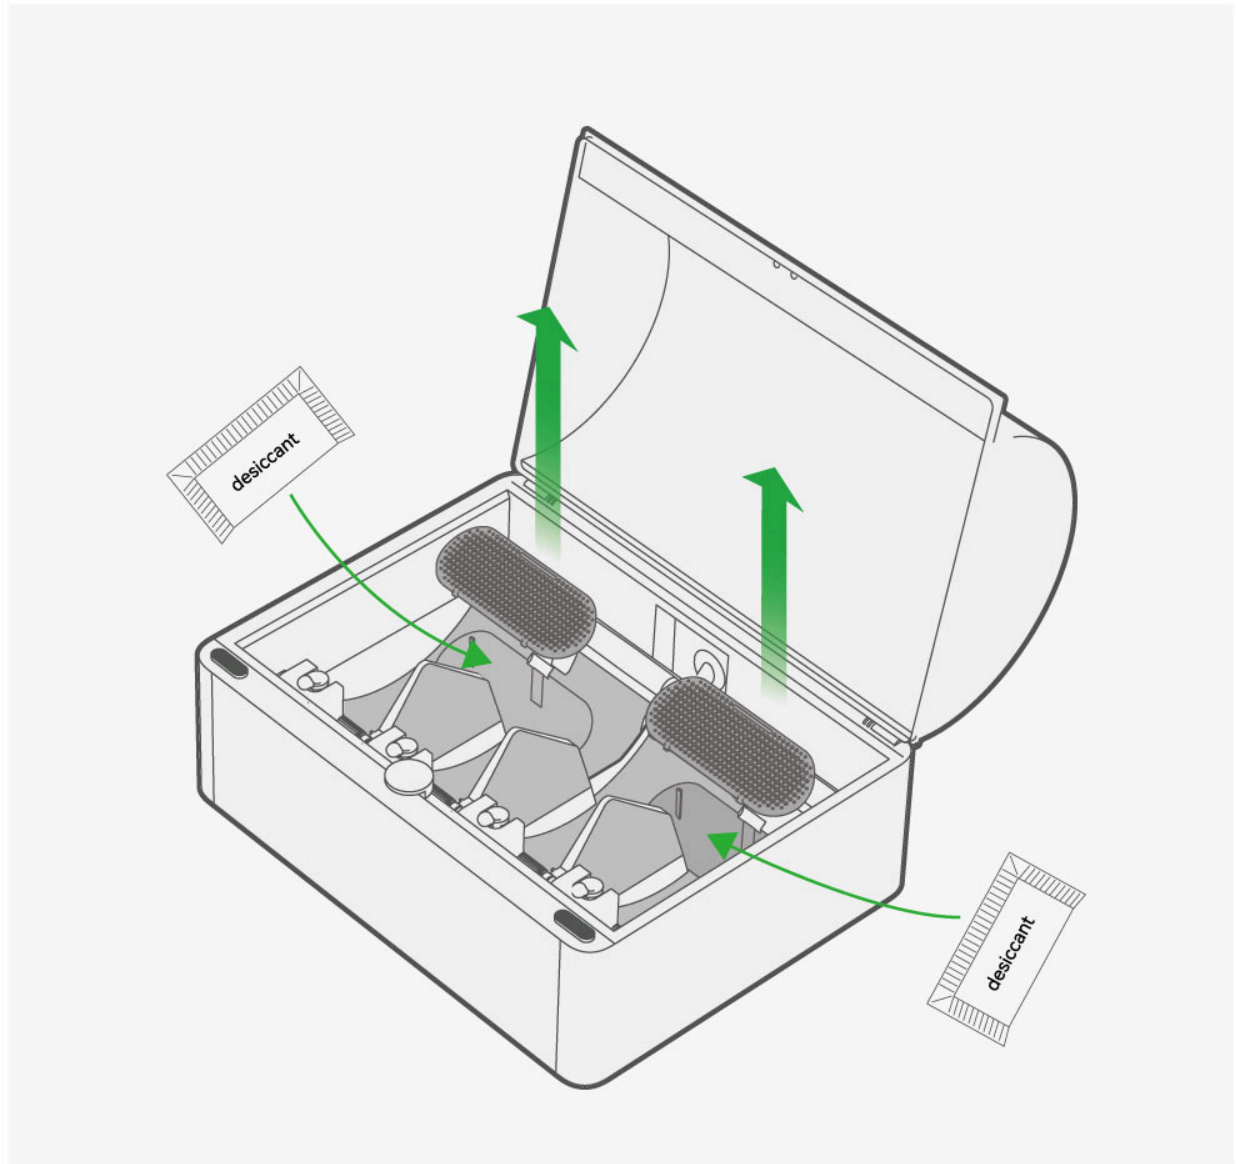

Filament Pre-Loading

Filament Pre-Loading

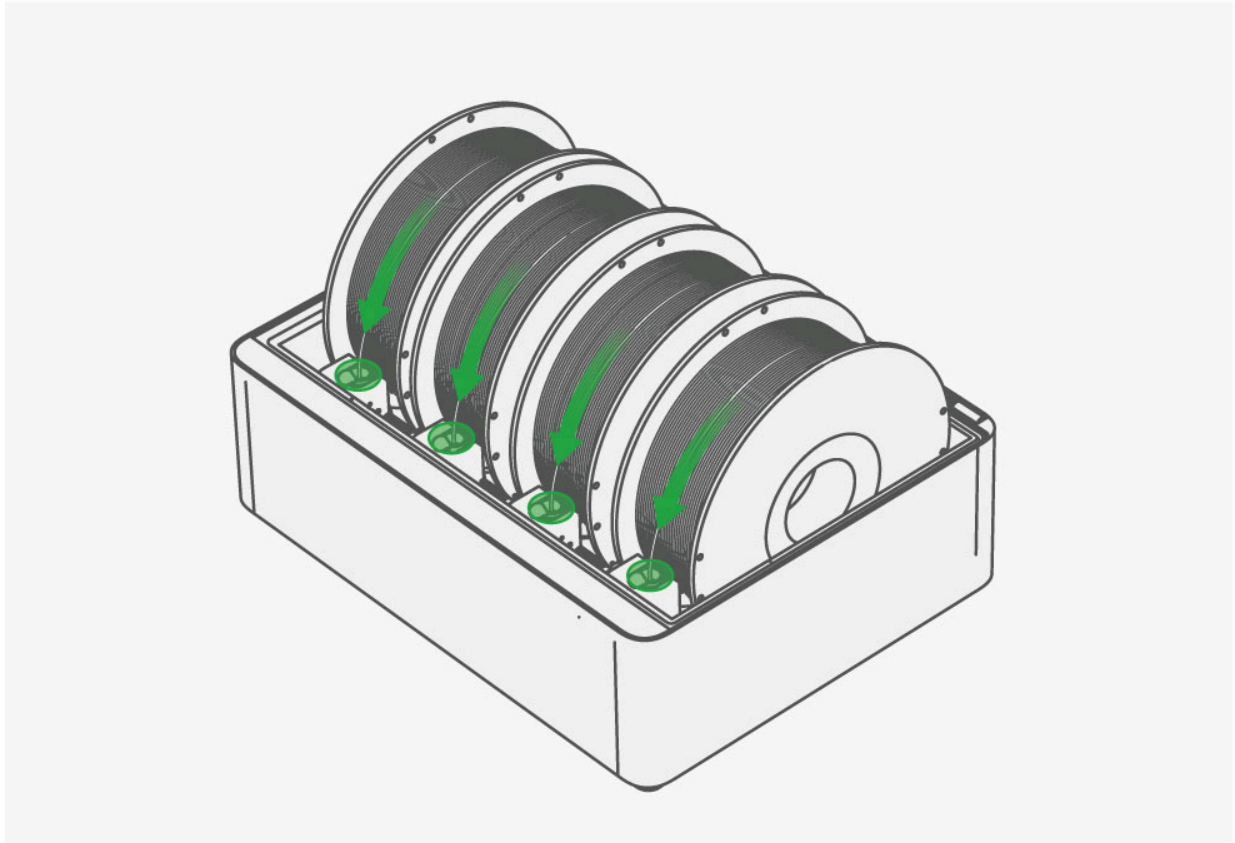

Place at least one spool of Bambu Filament into the AMS. Turn on the power to start the printer and the AMS. Insert the filament into the filament inlet. The filament will be automatically pre-loaded when detected.